



User's Guide for the
Centaurus™
UJ4EXP
4-in-1 Cable TV Remote Control
for Scientific-Atlanta®
Explorer 2000 & 3000 Converters

Use this guide in conjunction with your cable converter manual

VISIT US ON THE WEB

You can find programming instructions and codes for all of our remote controls, as well as information about our other products on our website:

www.uselectronics.com



© 2002 US Electronics, LLC
All rights reserved
Part Number USE18238, version 1.0
112602

1 BEFORE YOU BEGIN


If you have a TV with a remote control, we recommend that you plug its power cord directly into an available outlet (your cable installer may select an alternate setup).

Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

2 INSTALL BATTERIES

Before you can program or operate the remote control, you must install two AAA alkaline batteries.

- 1 Remove the battery compartment cover on the back of your remote control.
- 2 Check the battery polarity carefully, and install the batteries as shown in the illustration below.
- 3 Replace the battery compartment cover.

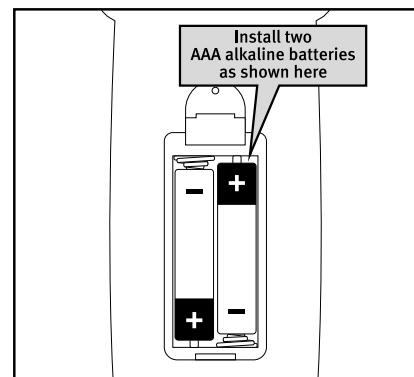


! IMPORTANT NOTE

Weak batteries may disrupt normal operation of the remote.

We recommend that you only use AAA alkaline batteries.

3 KNOW YOUR REMOTE

The diagram below shows the functions of special keys for your set-top box and program guide. US Electronics provides these function descriptions as a general guide to allow you to become more familiar with your set-top box. Refer to your set-top box manual for descriptions of specific functions.

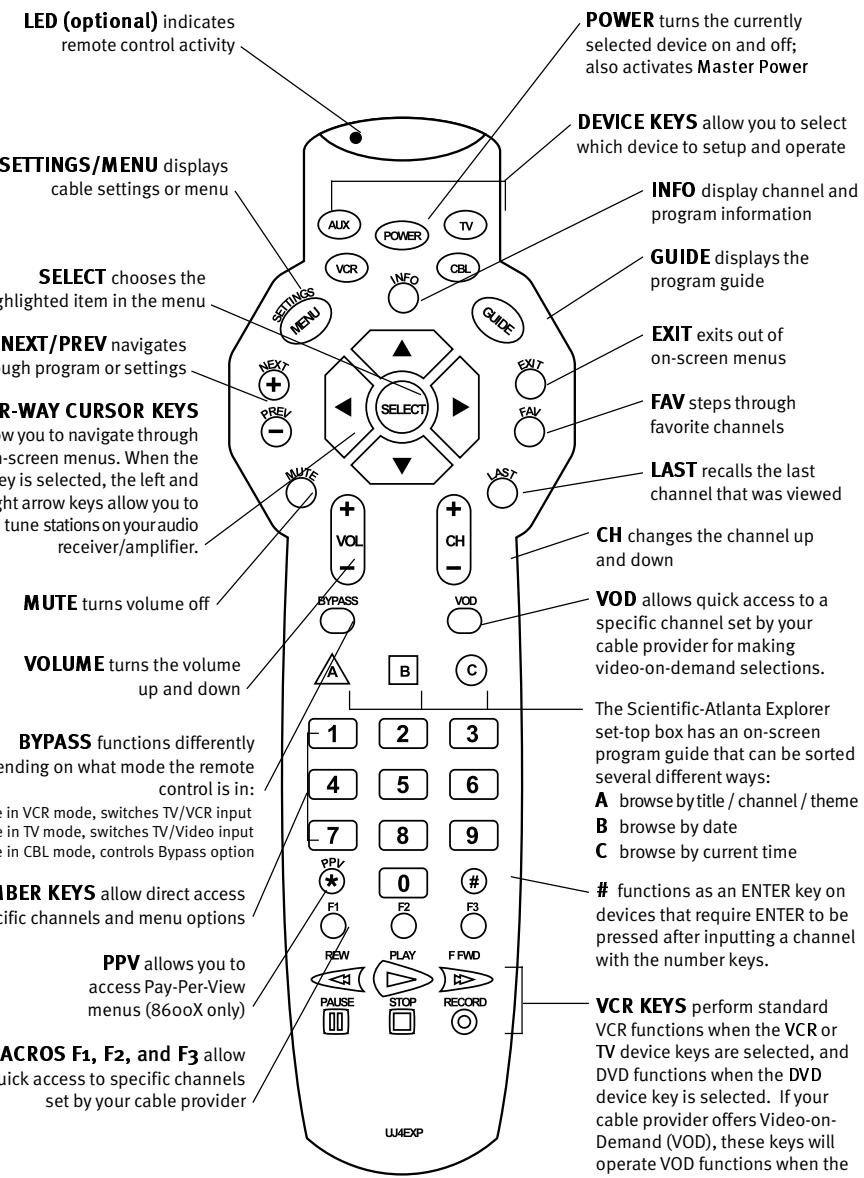

4 SETTING UP YOUR REMOTE

To set up the UJ4EXP to operate a device, look for the list of manufacturers' three-digit codes for the device in **SECTIONS 10-16** of this manual, then perform the following steps. The UJ4EXP remote control is already programmed with the code for your Scientific-Atlanta set-top box. DVD players, PVRs, TV/VCR combos, and TV/DVD player combos need to be programmed using the VCR device key.

- ❶ On the remote control, press and hold the appropriate device key for three seconds until all device keys begin to flash. Release the key. The selected device key will continue to flash.
- ❷ Enter the three digit code using the number keys.
After you press the first digit, the device key should light and stay on. After you press the last digit, the device key should flash three times and turn off.
- ❸ Point the remote at the device and press **POWER**. If the device turns on or off, you have finished programming the device.
- ❹ If you are programming the **AUX** device, press and hold the **AUX** key until all four device keys begin to flash. Release the **AUX** key. The **AUX** key will continue to flash. Then press the device key (TV, VCR, AUX) you wish to program to the **AUX** device key - use the **AUX** key to program audio amplifier codes. Enter the three digit code for the device. After you press the last digit, the **AUX** key should flash three times and turn off.
If you have tried all the codes listed for the manufacturer and the device does not respond, refer to the Smart Scan™ section in the manual.
- ❺ Write the codes below:

TV code: _____

AUX Code: _____ (device _____)

VCR Code: _____

5 PROGRAMMING VOLUME CONTROL

By default, your remote controls volume individually through each device. **AUX** is initially an audio device operating its own volume and mute. To set volume through a different device, follow these steps:

- ❶ Press and hold the **CBL** device key until all the device keys begin to flash. Release the **CBL** key. The **CBL** key will continue to flash.
- ❷ Press and release the **VOLUME UP** key then the **VOLUME DOWN** key. The device key will stop flashing and remain on. Press and release the **TV**, **CBL**, **VCR**, or **AUX** key corresponding to the device you wish to control volume. After you release the key, the **CBL** device key will flash three times and turn off.

NOTE: Only select the **VCR** key if you have a TV/VCR combo or TV/DVD combo programmed under the **VCR** device mode.

NOTE: If a device is selected that does not have volume control, the programming cancels and does not flash a confirmation sequence.

To return volume control to the default state (where the volume keys can control volume for each device):

- ❶ Same as step 1 above
- ❷ Press and release the **VOLUME UP** key. The **CBL** device key will stop flashing and stay on. Press and release the **VOLUME DOWN** key, and then the **SELECT** key. After you release the **SELECT** key, the **CBL** device key will flash three times and turn off.

6 MASTER POWER CONTROL

The Master Power function allows you to turn off and on two or more devices simultaneously with a single press of the power button. Follow these steps to program the Master Power function.

- ❶ Press and hold the **CBL** device key until all the device keys begin to flash. Release the **CBL** key. The **CBL** key will continue to flash.
- ❷ Press and release the **POWER** key.
- ❸ One at a time, press and release the **DEVICE KEYS** corresponding to each device you wish to be controlled by Master Power.
NOTE: If no keys are pressed in this step, no change will occur in Master Power programming.
- ❹ Press and release the **POWER** key. The device keys should flash and turn off.
- ❺ Manually turn on all devices. Then test the Master Power control by pressing the **POWER** key.

To disable Master Power, select only one device for Master Power (any device can be selected). The remote will now control the power ON/OFF of each device separately.

NOTE: Once Master Power has been programmed for two or more devices, pressing the **POWER** key in normal operation will cause the remote to transmit the **POWER** on/off commands for those devices selected during Master Power programming, UNLESS you do the following: To transmit a **POWER** on/off command for a device NOT included in the Master Power selection, press the **DEVICE** key for that device immediately (within five seconds) before pressing the **POWER** key.

7 CHANNEL LOCK

Channel Lock prevents the channel up and down functions from operating any device other than the set-top box – no matter which device (TV, Cable, VCR, or AUX) is currently selected. The UJ4EXP comes with Channel Lock activated. If you want the remote control to operate the channel function on your TV or VCR, you will need to deactivate Channel Lock. To deactivate Channel Lock, follow these steps:

- ❶ Press and hold the **CBL** device key until all the device keys begin to flash. Release the **CBL** key. The **CBL** key will continue to flash.
- ❷ Press and release the **CHANNEL UP** key, then the **CHANNEL DOWN** key, and finally the **SELECT** key. The **CBL** device key will flash three times to confirm the procedure.
Repeat these steps to reactivate Channel Lock.

8 RECALLING A DEVICE CODE

Perform the following steps to read the code currently set for a device. This is useful for retrieving a device code that was set using the Smart Scan™ procedure (**SECTION 9**).

- ❶ Press and hold a device key until the four device keys flash twice. Release the key. The selected device key will continue to flash.
- ❷ Press and release the **SELECT** key. The device key flashes each of the three digits in the code. A pause separates each digit. For example, three flashes represent the number 3, and a rapid flicker represents 0. A code of 103 will be shown as:
FLASH <pause> FLICKER <pause> FLASH... FLASH... FLASH
- ❸ Count and record the sequence of flashes to determine the three-digit code.


9

SMART SCAN™ AUTOMATIC PROGRAMMING

The Smart Scan™ automatic programming method will allow you to cycle through all the available codes in the remote until you find the right code for a device.

- 1 Manually turn on power to the device you want to program the remote for.
- 2 For TV and VCR modes, press and hold the appropriate device key for three seconds until all device keys begin to flash. Release the key. Then press and release the POWER key. The device key will stop flashing and stay on. Proceed to Step 3 to perform Smart Scan™.
- For AUX mode, press and hold the AUX key for three seconds until the AUX key begins to flash. Release the key. Then press the TV, VCR, or AUX device key, depending on which device you want to assign to the AUX key. The AUX key will stop flashing and stay on. Press and release the POWER key. Proceed to Step 3 to perform the Smart Scan™.
- 3 Point the remote control at the device. Repeatedly press and release (or press and hold) the UP ARROW key until the device turns off. If holding the ARROW UP or ARROW DOWN key, the remote will send a code approximately once every second. If pressing keys repeatedly, one code is sent each time the key is pressed. If you accidentally press the UP ARROW key after the device has turned off, press the DOWN ARROW key to return to the previous device code.
- 4 While performing Smart Scan™, you can pause to test other device functions using the remote control. If primary functions do not work, resume Smart Scan™ by pressing the ARROW keys to find another code that turns off the device. Then test the functions again. When you are satisfied that all primary functions are working, press SELECT to lock in the code. The device key will then flash three times.

NOTE: When scanning for DVD players, PVRs, TV/VCR combos, and TV/DVD player combos, use the Smart Scan™ procedure with the VCR device key.

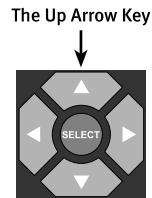

10

AUDIO AMPLIFIER CODES

Admiral	185	Kenwood	058 • 059 • 083 • 087
Aiwa	020 • 033 • 102 • 103 • 104		135 • 162 • 214
	149 • 150 • 151 • 152 • 173	LXI	021
Akai	075 • 119	Lloyds	170
Bose	020 • 211	MCS	021
Carver	022 • 083 • 091 • 093 • 147	Magnavox	028 • 119 • 170 • 210
Casio	021 • 170	Marantz	015 • 074 • 081 • 086 • 091
Cinema Sound	036		093 • 099 • 120 • 171
Citation	052 • 212	Memorex	151
Clarion	059	Mitsubishi	045 • 082
Curtis Mathes	021	Modulaire	170
Denon	036 • 106 • 107 • 108	NAD	099
	109 • 110	Nakamichi	074 • 084 • 157 • 217
Fisher	083 • 087 • 147 • 158	Onkyo	050 • 061 • 071 • 085
Garrard	075		096 • 124 • 218 • 219
Harman Kardon	052 • 113 • 160 • 212	Optimus	037 • 059 • 075
Hitachi	110	Panasonic	038 • 126 • 177 • 220
JBL	078 • 161	Parasound	178
JC Penney	021 • 170	Philips	015 • 086 • 093
JVC	041 • 043 • 044 • 079	Pioneer	023 • 062 • 088 • 187 • 221
Jensen	114 • 206	RCA	053 • 063 • 089 • 119 • 129 • 130

11

PERSONAL VIDEO RECORDER CODES

Panasonic	145	ShowStopper	145	TiVO/Philips	135
ReplayTV	142 • 145	TiVO	135 • 146	TiVO/Sony	146

12

DVD CODES

Aiwa	179	Magnavox	021 • 120 • 198 • 215 • 220
Akai	163	Marantz	198
Apex Digital	216	Mitsubishi	116 • 120 • 220 • 229
Denon	112 • 113 • 185 • 195 222 • 227	NAD	120 • 224
Emerson	100	Nordmende	205
Ferguson	205	Onkyo	220 • 225
Fisher	152 • 189	Panasonic	152 • 153 • 182 • 185
Funai	115	Philips	188 • 227
General Electric	205	Pioneer	021 • 198 • 220
Goldstar	119 • 131 • 196	Proscan	120 • 188 • 191
Harman Kardon	151	Quasar	228
Hitachi	104 • 181	RCA	105 • 198 • 220
JVC	107 • 117 • 156	RadioShack	152
KLH	187	Runco	036 • 199 • 205
Kenwood	018 • 053		115

Saba	205
Samsung	208 • 209 • 220
Sharp	053 • 197
Sherwood	166
Shinco	206
Sylvania	101 • 103 • 108 • 200 • 218
Technics	152 • 153 • 182 • 185
Theta Digital	021
Thomson	201 • 205
Toshiba	053 • 120 • 220
Yamaha	055 • 185 • 214 • 217 • 227
Zenith	119 • 131 • 196 • 203 • 220

13

TV/DVD COMBO CODES

NOTE: Emerson, Sharp, and Sylvania TV/DVD combos require that the TV and DVD sections of the unit be programmed *separately*. If you own one of these models, note that there are two codes listed below. You will need to program the remote control for the TV and DVD sections of the device by using the two codes below and by following the instructions in Section 4.

Broskonic	110	Konka	106
Emerson	TV = 230, DVD = 100	Samsung	Toshiba

14

TV/VCR COMBO CODES

Aiwa	251	Marantz	237 • 238
Audio Dynamics	238	Marta	223
Broksonic	219 • 226	Memorex	223 • 242 • 244 • 245
Curtis Mathes	241 • 251		248 • 251
DBX	238	Mitsubishi	239 • 240
Daewoo	247 • 250 • 252	Multitech	251
Electrohome	240	Optimus	242
Emerson	219 • 223 • 226 • 251 252 • 253	Orion	219 • 226
	251	Panasonic	241 • 242
Funai	233 • 241 • 248	Philco	236 • 237 • 251
General Electric	233 • 241 • 248	Philips	223 • 236 • 237 • 251
Goldstar	223 • 230 • 238 • 254	Pioneer	235
Harman Kardon	238	Proscan	233
Hitachi	241 • 251	Pulsar	248
JC Penney	223 • 238 • 241 • 242	Quasar	241 • 242
JVC	234 • 235 • 238	RCA	233 • 241 • 251
Vector Research	171 • 202	Kenwood	235 • 251
Wards	083	RadioShack	230 • 242 • 251
Yamaha	053 • 059 • 145 • 180 • 203	Realistic	223 • 251
XI	223 • 251 • 254	Wards	251
MGA	240	Runco	243
MTC	251	Samsung	221 • 244 • 245 • 246 • 247
Magnavox	236 • 237 • 241 • 251	Sansui	219 • 235 • 251

